

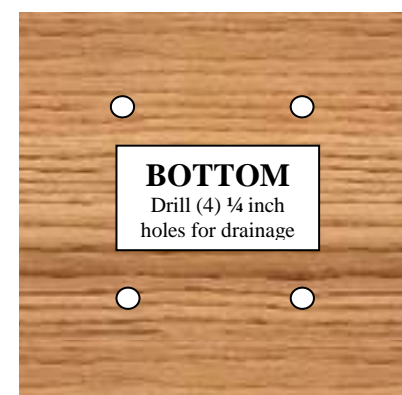


California Wood Duck Program-Nest Box Assembly Diagram for 5/8 inch plywood

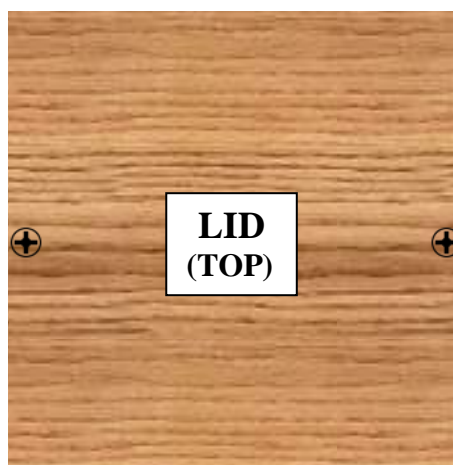

Use (24)-1 $\frac{5}{8}$ inch exterior deck screws to assemble next box. (4)-1 $\frac{1}{4}$ inch exterior screws inserted at 45 degree angle to attach the cleats to the underside of the lid. Exterior wood glue is recommended for a secure fit. Follow the parts diagram for placement of screws. For more info, call CWA at (916) 648-1406

©4Woodys

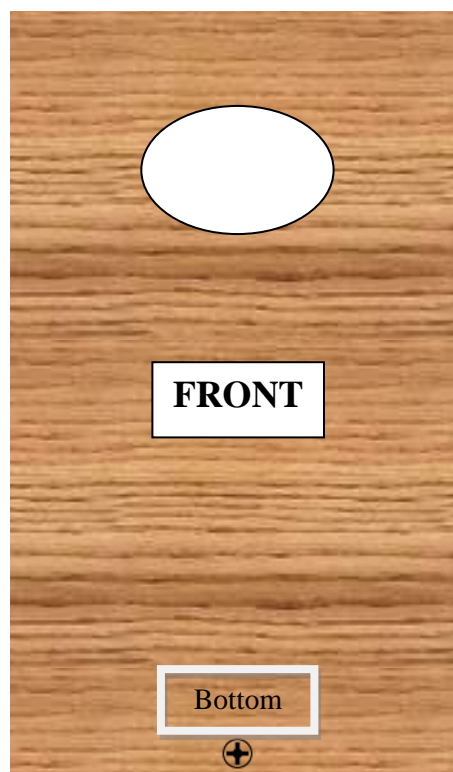